

**CHANGE
NOTICE**

THESE ARE SUPERSEDING OR SUPPLEMENTARY PAGES TO SAME PUBLICATION OF PREVIOUS DATE.

Insert these pages into basic publication
Destroy superseded pages


A1-F18AC-NFM-000

NATOPS FLIGHT MANUAL NAVY MODEL

F/A-18A/B/C/D 161353 AND UP AIRCRAFT

McDonnell Douglas Corporation

THIS PUBLICATION IS INCOMPLETE WITHOUT A1-F18AC-NFM-200
AND A1-F18AC-NFM-210

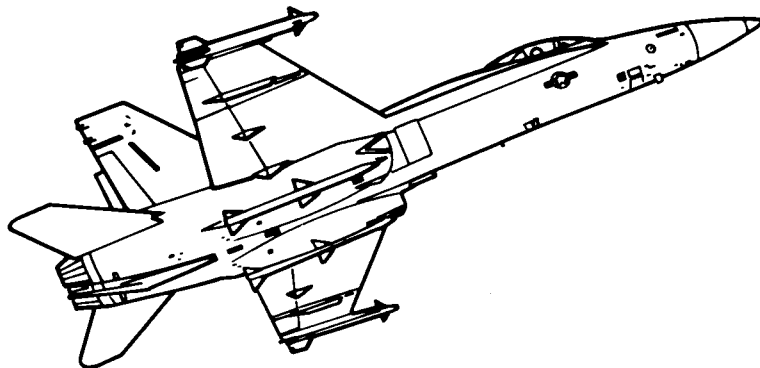

DISTRIBUTION STATEMENT C. Distribution authorized to US Government agencies and their contractors to protect publications required for official use or for administrative or operational purposes only, determined on 1 September 1999. Other requests for this document shall be referred to Commanding Officer, Naval Air Technical Data and Engineering Service Command, Naval Air Station North Island, P.O. Box 357031, Building 90 Distribution, San Diego CA 92135-7031.

DESTRUCTION NOTICE - For unclassified, limited documents, destroy by any method that will prevent disclosure of the contents or reconstruction of the document.

**ISSUED BY AUTHORITY OF THE CHIEF OF NAVAL OPERATIONS AND
UNDER THE DIRECTION OF THE COMMANDER
NAVAL AIR SYSTEMS COMMAND.**

THE AIRCRAFT	1
INDOCTRINATION	2
NORMAL PROCEDURES	3
FLIGHT CHARACTERISTICS	4
EMERGENCY PROCEDURES	5
ALL - WEATHER OPERATION	6
COMMUNICATION PROCEDURES	7
WEAPONS SYSTEMS	8
FLIGHT CREW COORDINATION	9
NATOPS EVALUATION	10
PERFORMANCE DATA	11
INDEX & FOLDOUTS	