

2 ½ Ton "M" Series Truck (G742) (Early and Late Models)
M35 ,M36 ,M34 ,M44 ,M45 ,M46 ,M57 ,M58 ,Eng.LDS427,A1,A2

TM9-2320-209-10-1 Operator, Installation and Reference Data
TM9-2320-209-10-2 Operator Scheduled Maintenance
TM9-2320-209-10-3 Operator Troubleshooting
TM9-2320-209-10-4 Operator Maintenance
LO-2320-209-12-1 Lube Order
TM9-2320-209-20P Org Maintenance Parts and Tools
TM9-2320-209-20-2-2 Troubleshooting
TM9-2320-209-20-3-1 Maintenance (Chapters 1 - 12)
TM9-2320-209-20-3-2 Maintenance (Chapters 13 - 17)
TM9-2320-209-20-3-3 Maintenance (Chapter 18)
TM9-2320-209-20-3-4 Maintenance (Chapters 19)
TM9-2320-209-34P Parts and Tools-Direct and General Support
TM9-2320-209-34-1 Direct and General Support Level Troubleshoot
TM9-2320-209-34-2-1 DS and GS Level Maintenance (Chapter 16)
TM9-2320-209-34-2-2 DS and GS Level Maintenance (Chapter 17)
TM9-2320-209-34-2-3 DS and GS Level Maintenance (Chapter 18)
TM9-2320-361-10 Operators Manual
TM9-2320-361-20 Unit Maintenance
TM9-2320-361-20P Unit Maintenance Parts and Tools
TM9-2320-361-34 DS and GS Level Maintenance
TM9-2320-361-34P DS and GS Level Parts and Tools
TM9-2520-246-34P DS and GS Level Parts and Transmissions
TM9-2520-246-34 DS and GS Level Maintenance - Transmissions
TM9-2815-204-34P Engine Diesel 16 Parts
TM9-2815-210-34P DS and GS Level Parts and Tools, Engine, Dies
TM9-2815-210-34-1 DS and GS Level Troubleshooting
TM9-2815-210-34-2-1 DS and GS Level Maintenance, Engine, (Chapter
TM9-2815-210-34-2-2 DS and GS Level Maintenance, Engine, (Chapters